

1. Before your start


Which mode do you need? Please refer to the table to choose a proper mode.

Scenarios	Operating Modes
Local connection to the Flexit Nordic-/EcoNordic-product if no network is available	Access Point Mode (Default Mode)
Connect the Flexit Nordic-/EcoNordic-product to a wireless network if no wired (Ethernet) connection is possible	Client Mode

2. Configure the Access Point

2.1. ACCESS POINT MODE (DEFAULT)

Local connection to your Flexit Nordic-/EcoNordic-product if no network exist.

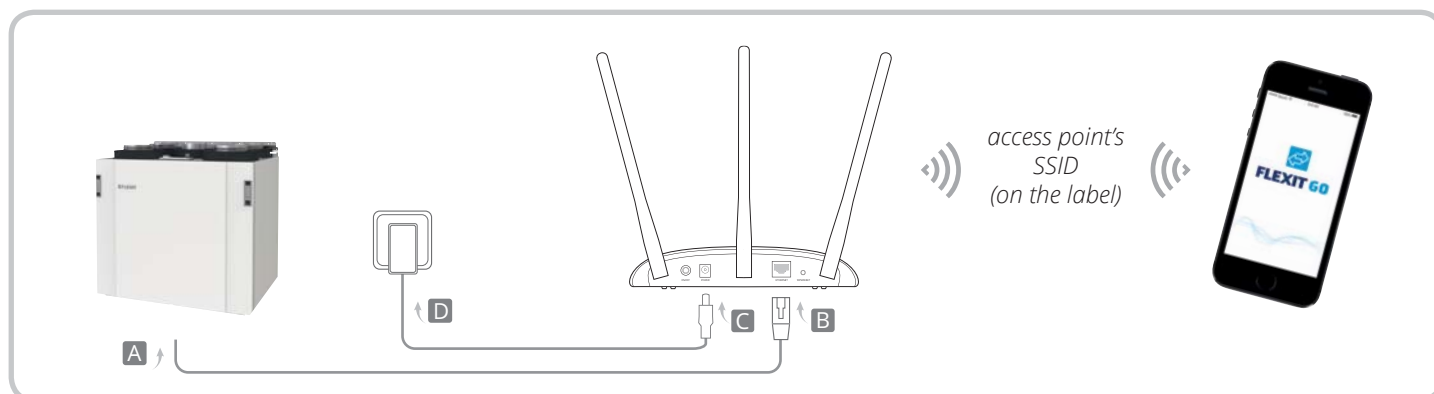

1. Connect the access point according to Step A to D in the diagram.
2. Power on the access point, wait until the Power (⏻) and Wireless (📶) LEDs are lit and stable, and use the default SSID and Password printed on the label of the access point to join its Wi-Fi network.
3. Connect to the Flexit Nordic-/EcoNordic-product using the Flexit Go App on your mobile device

3. Technical data

3.1. DIMENSIONS

Overall dimensions (h x w x d): 36 x 181 x 125 mm
Weight: ± 0,20 kg

3.2. AMBIENT CONDITIONS

Operating Temperature Range: 0 to 40 °C
Shipping & Storage Temperature Range:
-40 to 70°C
Relative Humidity: 10 - 90%, non-
condensing

3.3. ELECTRICAL SPECIFICATION

Mains Power Source: 9 V DC
Maximum power consumption: 0,6 A

3.4. WIRELESS CONNECTION SPECIFICATIONS

Communication frequency: 2,4 GHz
Communication standards: IEEE 802.11n,
IEEE 802.11g,
IEEE 802.11b

*Our products are subject to continuous development and we
therefore reserve the right to make changes.
We also disclaim liability for any printing errors that may occur.*



Flexit AS, Televeien 15, N-1870 Ørje
www.flexit.no